

## 26-30GHz Integrated Frequency Doubler

### *General Description*

The NX00401 frequency doubler is a integrated microwave assembly that includes input buffer amplifier, balanced diode doubler, band-pass filter, output power amplifier and low-pass filter. The doubler is designed to provide high power, pure signal in 26 to 30 GHz frequency range. It operates at 0 to +10 dBm input power over -30 to +70 °C temperature range. The model incorporates voltage regulators and is available with field replaceable SMA / K connectors.



### *Performance at 25 °C, +2 dBm $P_{in}$*


Parameter	Min.	Typ.	Max.	Units
Input Frequency	13		15	GHz
Output Frequency	26		30	GHz
Output Power	17	19		dBm
Output Power Flatness over Operating Frequency Range		± 1	±1.5	dB
Fundamental Signal Rejection	45	50		dBc
Third Harmonic Rejection	40	45		dBc
Input VSWR		1.9:1	2.4:1	
Output VSWR ( $P_{in}$ not applied)		2.0:1	2.4:1	
DC Supply Voltage (V+)	+11	+12	+15	V
DC Supply Voltage (V-)	-15	-5	-4	V
Current at +12 V		450	500	mA
Current at -5 V		6	8	mA

Customized Designs: For custom designs, including both electrical and mechanical, please contact us at [sales@nextec-rf.com](mailto:sales@nextec-rf.com).


## 26-30GHz Integrated Frequency Doubler

*Typical Test Data at 25 °C*

### Output Power

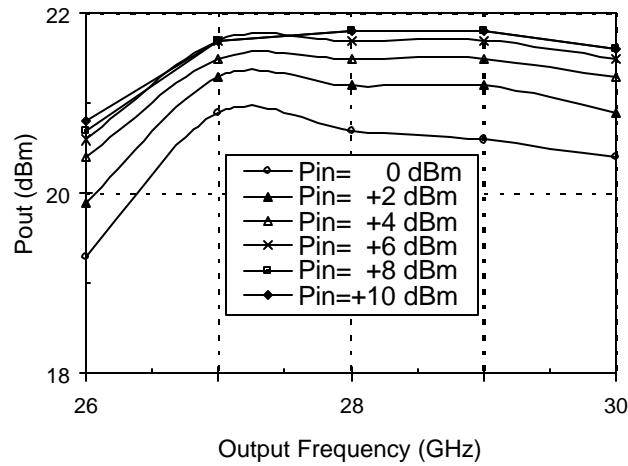


### Harmonics at +0 dBm P<sub>in</sub>

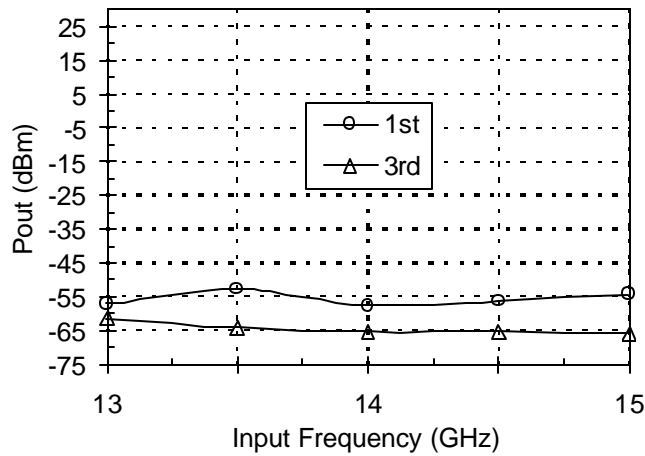

Customized Designs: For custom designs, including both electrical and mechanical, please contact us at [sales@nextec-rf.com](mailto:sales@nextec-rf.com).

26-30GHz Integrated Frequency Doubler

Harmonics at +10 dBm  $P_{in}$

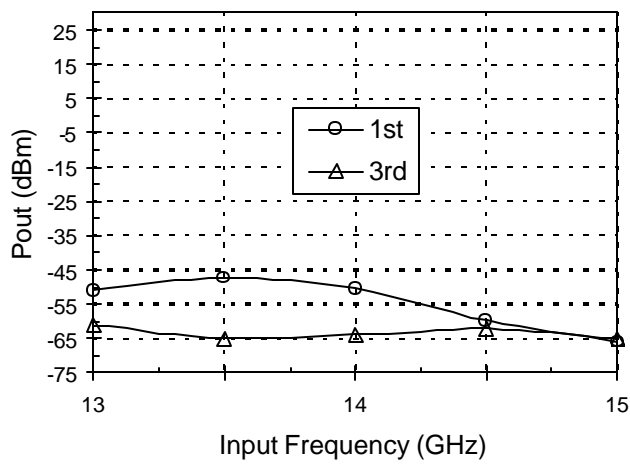


Customized Designs: For custom designs, including both electrical and mechanical, please contact us at [sales@nextec-rf.com](mailto:sales@nextec-rf.com).

3350 Scott Blvd. Bldg. 49, Santa Clara, CA 95054 • Phone: (408) 727-1189 • Fax: (408) 727-5915 • [www.nextec-rf.com](http://www.nextec-rf.com)  
April 9, 2003

## 26-30GHz Integrated Frequency Doubler

### *Outline Drawing*

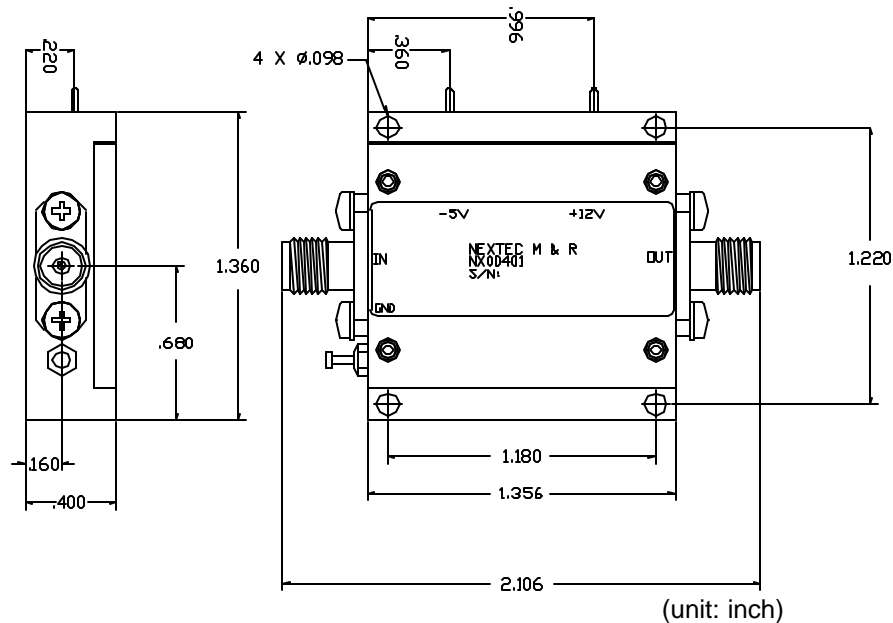

### *Biasing and Operation*

1. Turn off RF input power. Operating baseplate temperature should not exceed +70 °C. Adequate heat sinking is required.
2. Connect ground terminal.
3. Apply negative supply voltage of -5 V as shown.
4. Apply positive supply voltage of +12 V.
5. Turn on RF power. The input RF power should not exceed +10 dBm, +2 dBm is recommended.

Customized Designs: For custom designs, including both electrical and mechanical, please contact us at [sales@nextec-rf.com](mailto:sales@nextec-rf.com).